

24" Section

HearthGate™ Model G70-24 black

ConfigureGate™ and PlayDen™ Model G80-24 white

User Guide

KidCo, Inc

Important Notes

FOLLOW THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE.

Assembly

1.




The removable, vertical bar has been mounted in cone end of extension.

2.



Remove vertical bar by lifting up on bar while pulling it down and out of cone.


3.

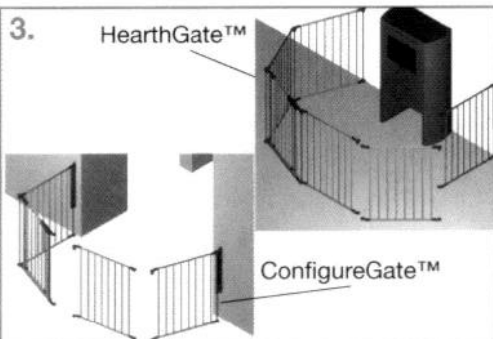

When adding to the **HearthGate™**, add extension in between two gate sections. If adding to the **ConfigureGate™**, add between door and gate section. If adding to **PlayDen™**, add anywhere in configuration.


If more than one extension is added, install in continuation of first extension.

Assembly

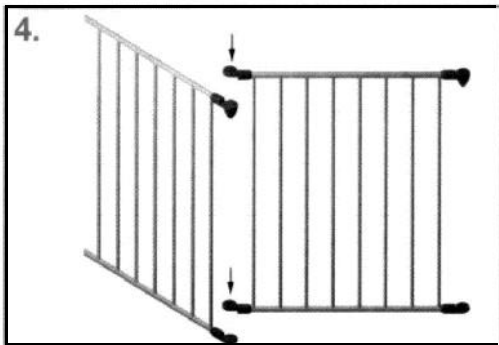

Position optional section with cone hinge at top. Align cone hinge underneath top hinge on original end section.

When center of both hinges are aligned, top and bottom, release and they will lock together.

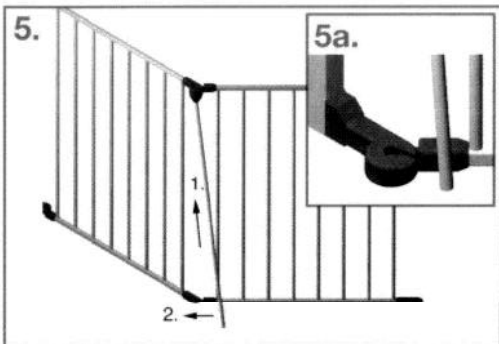

Reinstall a removable, vertical bar. Insert bar by pressing it into upper hinge cone, while sliding bar into groove of lower hinge. The spring in the cone will make bar lock in place.

Note: Please note that **HearthGate™/ConfigureGate™/PlayDen™** cannot be completely folded when optional extension/s are added.